

Stahlfred & Holzmichl



Manual



office@bio-stefan.at



bio-stefan.at



Bizibits Sales GmbH, Haidfeldstraße 33, 4060 Leonding,
Austria

November 2025



Safety

- Please read and follow the steps of the installation guide carefully and keep them for future reference. In the event of installation by other persons, these instructions must be passed on to them.

Suffocation!

- Do not let children play with parts of the product or packaging unsupervised. Keep small parts safe as they can be easily swallowed.

There is a risk of injury!

- Some of the components may have sharp edges. Improper use of the parts can potentially lead to injury. Please wear safety gloves.

Care and cleaning

- Clear the bin cover box of snow and leaves before use to avoid damage caused by improper operation and overloading.
- Wipe the outside of the structure with a soft, dry cloth. Only cleaning agents that are intended for steel maintenance as well as powder-coated surfaces with a surface structure may be used for cleaning.
- Always remove limescale or organic matter that you notice immediately. Corrosion can form under such deposits.
- To prevent moisture from the soil from penetrating the product, it is recommended to place a sturdy plastic film under the foundation.

Before installation!

- The product must be placed on a stable and level surface. A stable stand of the product is only guaranteed if it is mounted and erected on a firm, level and sufficiently load-bearing surface.
- Make sure you have all the assembly tools ready before you begin.
- Remove all protective films immediately after or during installation.
- For example, use the cardboard as a protective surface to avoid scratches during assembly.


Right size?

Especially, in the case of 120l nom cover boxes make sure before unpacking whether you have actually ordered the right size?


Goods that have already been unpacked or assembled will be checked upon return delivery and the depreciation in value compared to new goods will be invoiced. The clear expanses can be found on bio-stefan.at.

Parcel P01 – Hatch


Hatch 1x

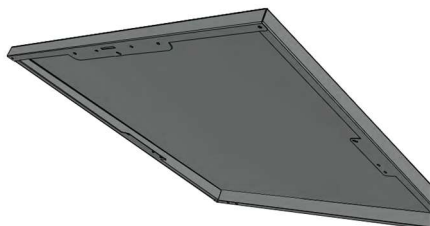

Hatch handle 1x

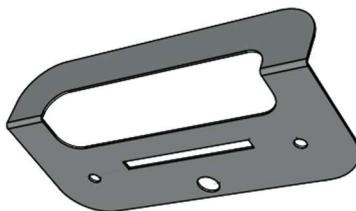

Lock tongue 1x

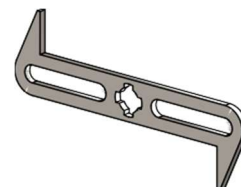

Gas strut 2x




Hook 1x



Chain 1x + carbine 2x



Hinge 2x

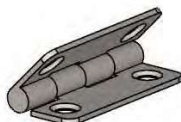

Rubber damper for hatch 2x




Countersunk screw M4 8x




Parcel P02 – Flora top


Flora top 1x

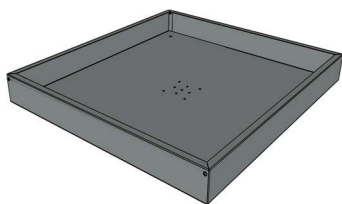


Lock tongue Flora 1x

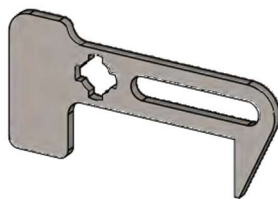

Radar Lock 1x

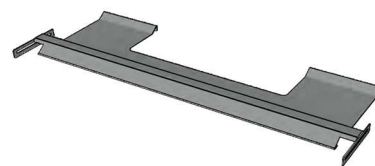

Bracket height-adjustable 2x



Drainage layer 2x



Chain 1x, Carabine 2x



Hex head screw M8x30 4x




Countersunk screw M4 8x



Parcel P03 – Side walls

Side walls 2x

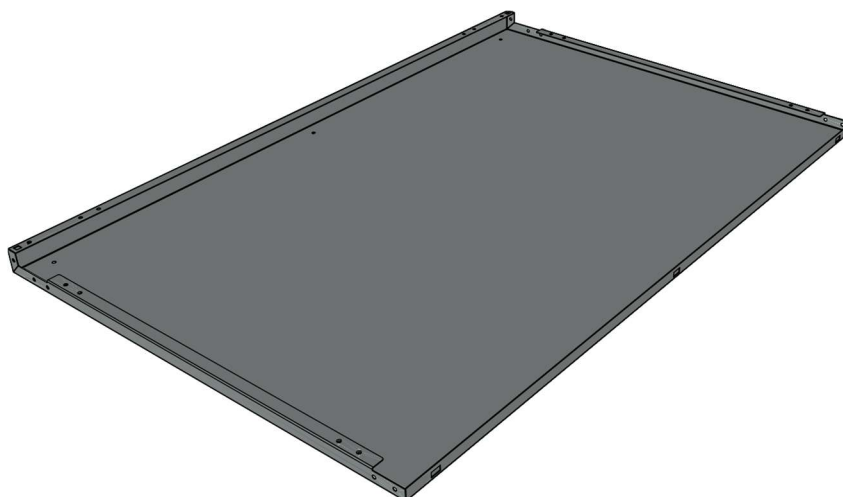


Paket P04 – Door Stahlfred

Door Stahlfred 1x



Hinge 2x

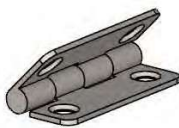

Countersunk screw M4 8x



Parcel P05 – Door Holzmichl


Door Holzmichl 1x



Wooden planks 12x



Hinge 2x

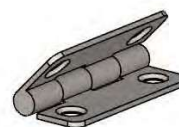

Pan head screw M2x10 6x



Screw 3.5x12 16x



Countersunk screw M4 8x



Parcel P06 – Door with decor sheet


Door 1x



Pan head screw M2x10 6x



Hinge 2x

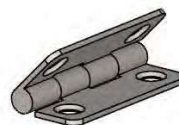


Countersunk screw M4 8x



Parcel P07 – Back wall

Back wall 1x

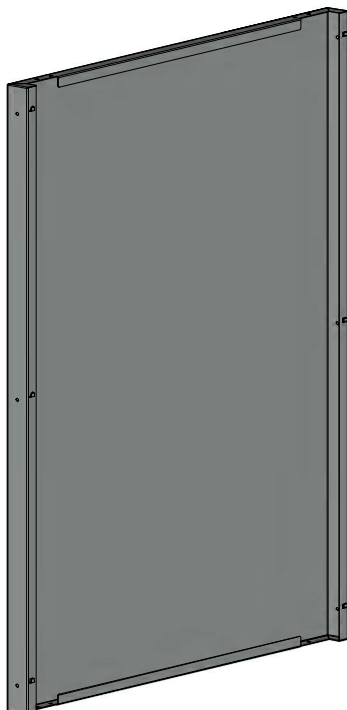

Countersunk screw M4 8x



Parcel P08 – Accessories

Upper front placket with lock hole
1x



Magnet + Bracket 1x




Front strip reinforcement +
magnet 1x



Frame reinforcement 2x




Leg reinforcement right & left 2x



rear floor rail 1x



Front bottom rail 1x

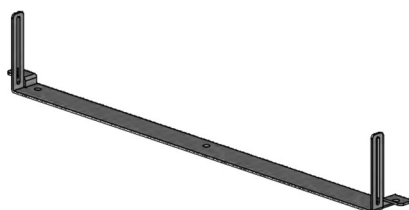

Adjustment feet 4x



Dowels + screws 4x



Key lock 1x




Countersunk screw M4 45x



Parcel P09 – Midframe

Midframe 1x

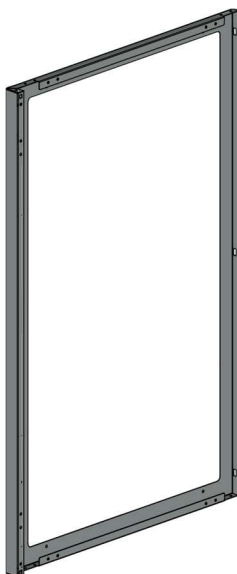

Wing nut M5x12 5x




Countersunk screw M5 10x



Parcel P10 – Shelf (optional)

Shelf 1x

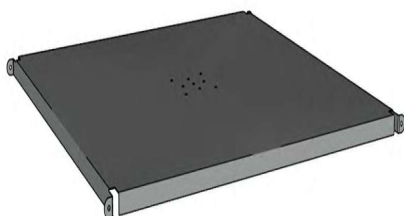


Wing nut M5x12 4x




Countersunk screw M5 4x




We recommend that the assembly be carried out by 2 people. The supplied packaging box is intended to serve as a base during assembly to protect against scratches.

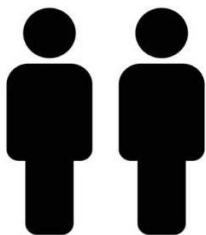



The side walls (P03) are connected to the rear wall (P07) by hooks.

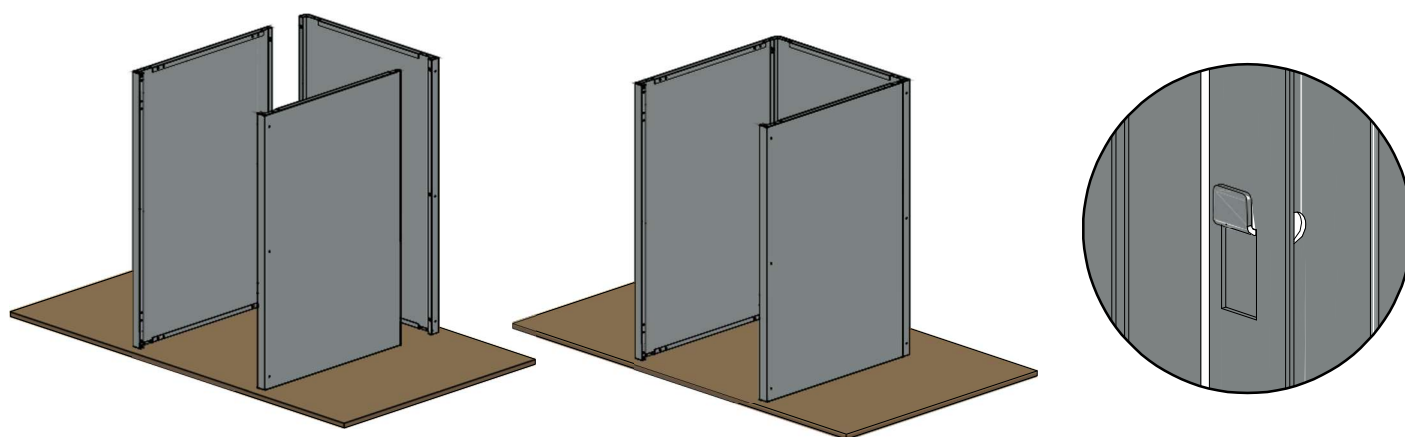




When buying a set (several individual boxes), the individual boxes are connected to each other by middle frames (P09). In this case, the side walls (P03) are mounted on the outside. More on this on page 20.

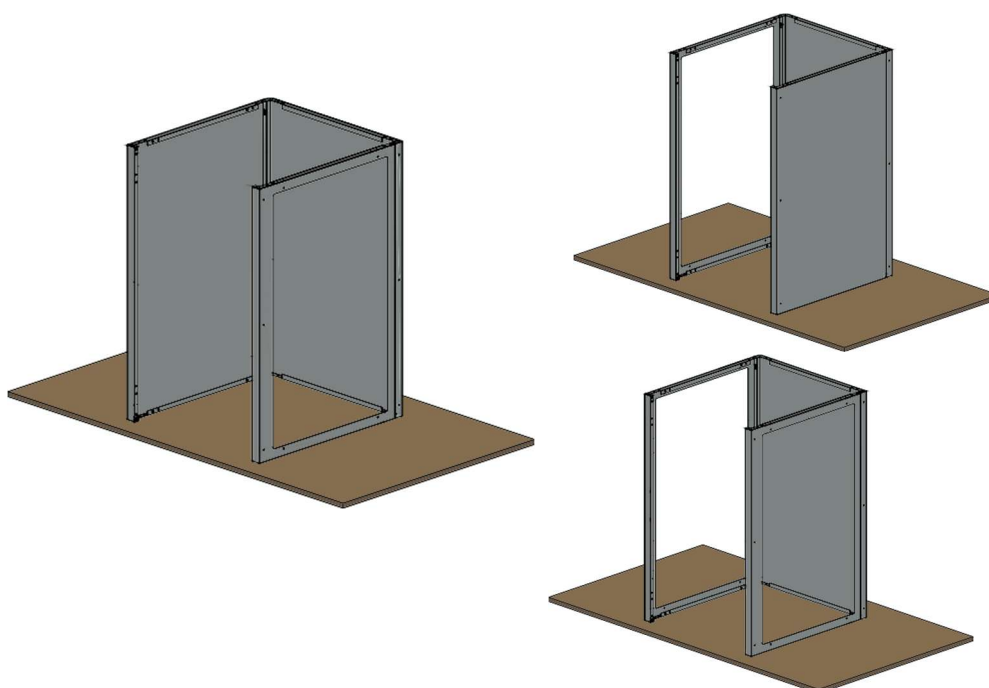


On the front of the hook, insert a door bar with a lock opening (P08).

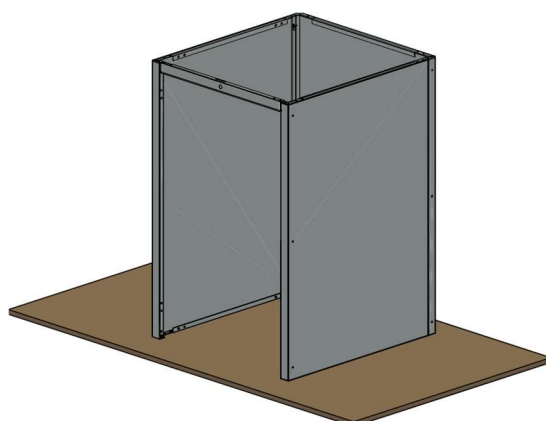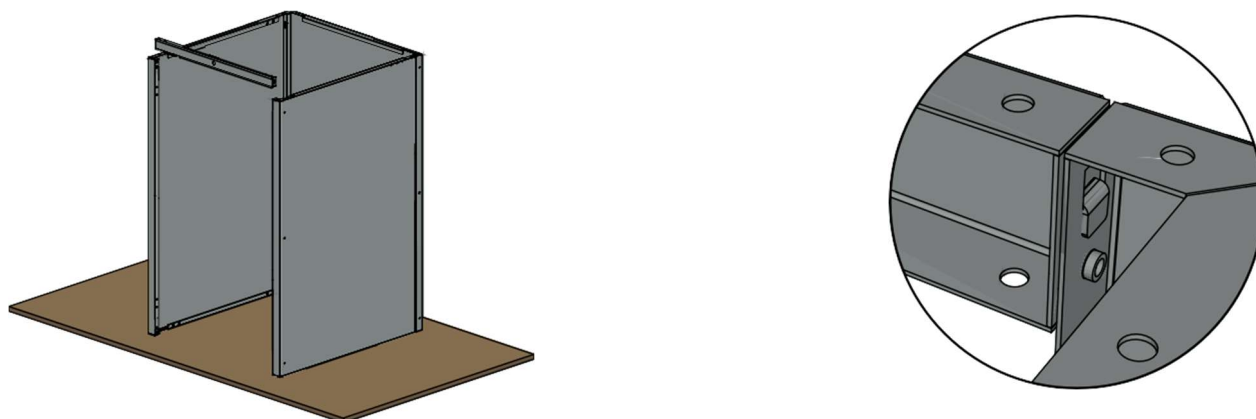



Add reinforcement elements for the front and rear (P08) and attach to the body with M4 screws (P08).

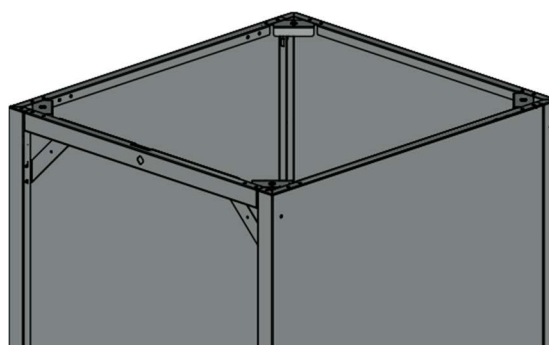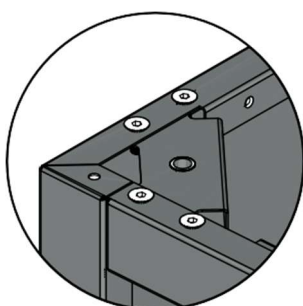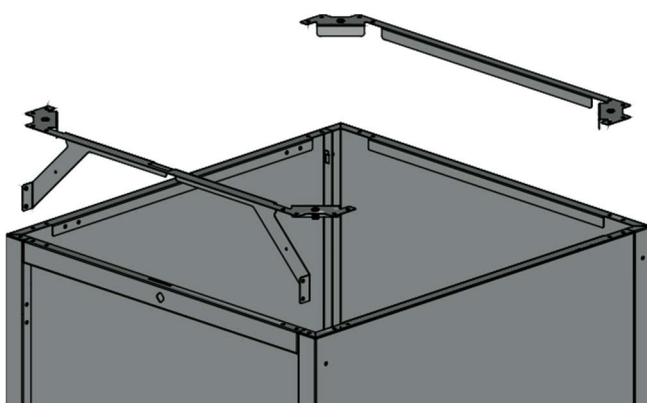






Turn the box upside down

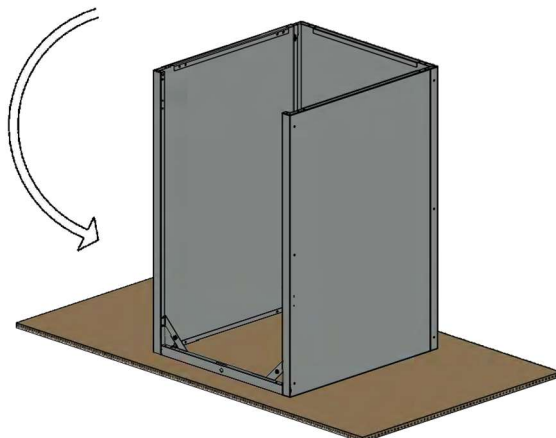


Add the reinforcement elements at the front and back (P08). These are attached to the body with M4 screws (P08).

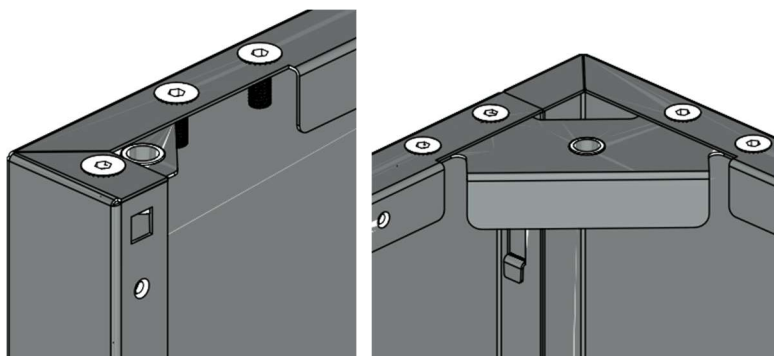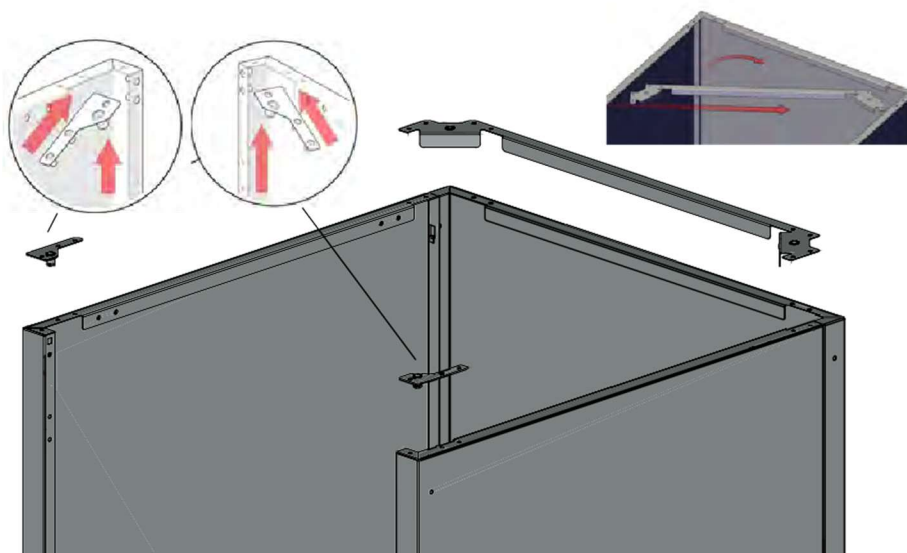



Attach the front floor rail (P08) to the front and screw it with M4 screws (P08)

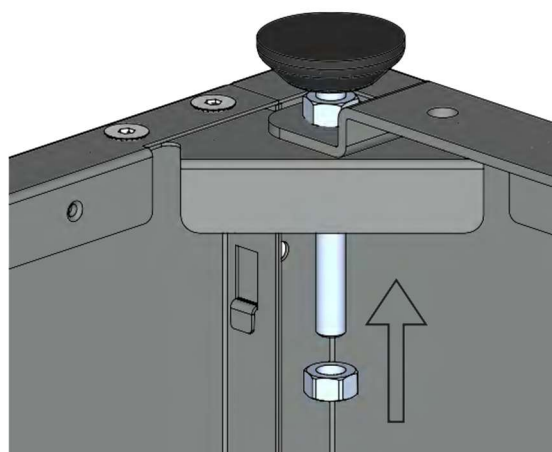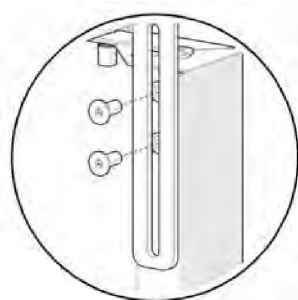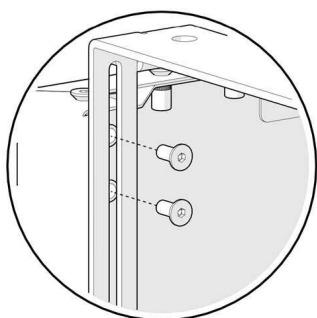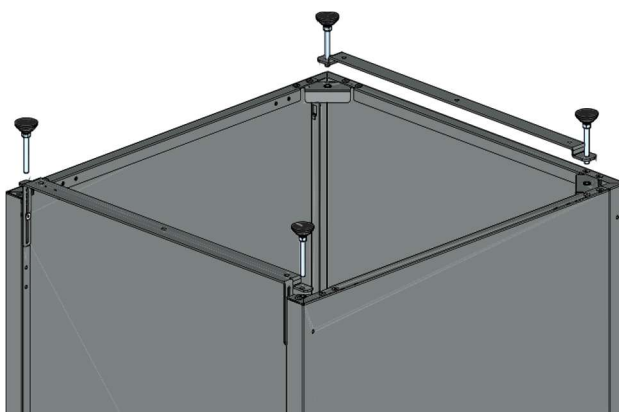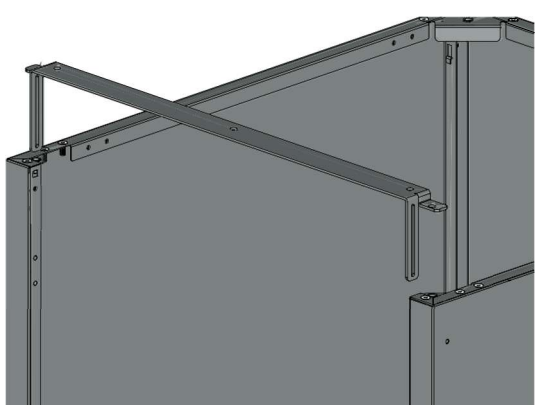



Turn the box over again

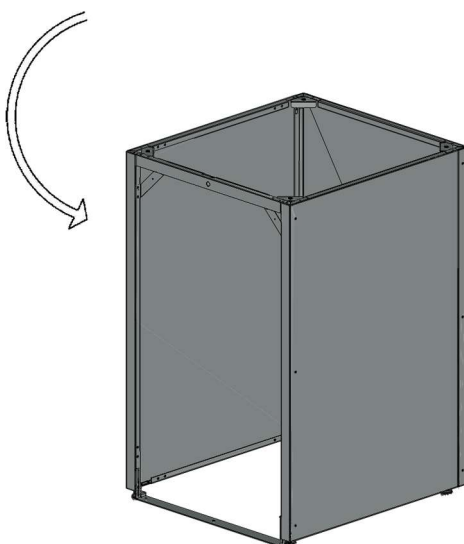


Add the lock (P08) and a closing tongue (P01 hinged lid or P02 Flora).

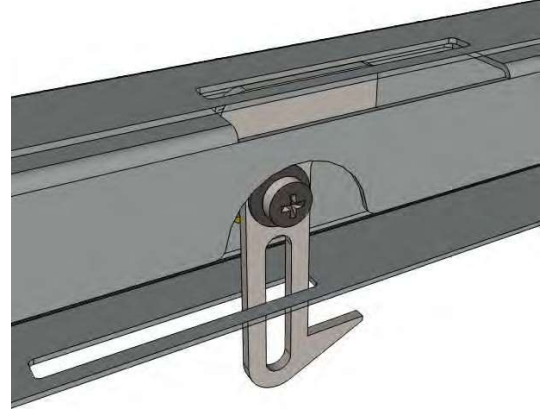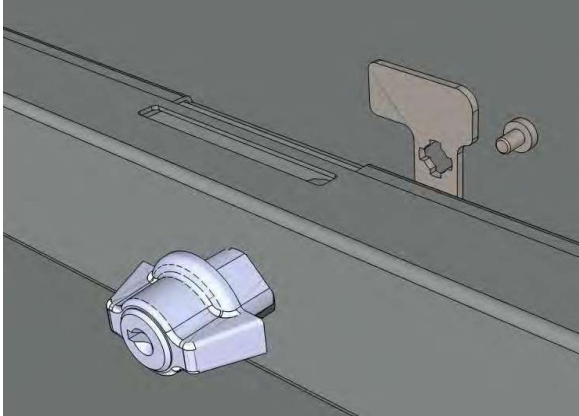




Attach hinges A and B (P01 or P02) and doorstop C (P08) with M4 screws (P01 or P02 and P08), then attach 2 magnets to doorstop C (P08) and door rod reinforcement D (P08). This allows them to determine the door hinge on site.

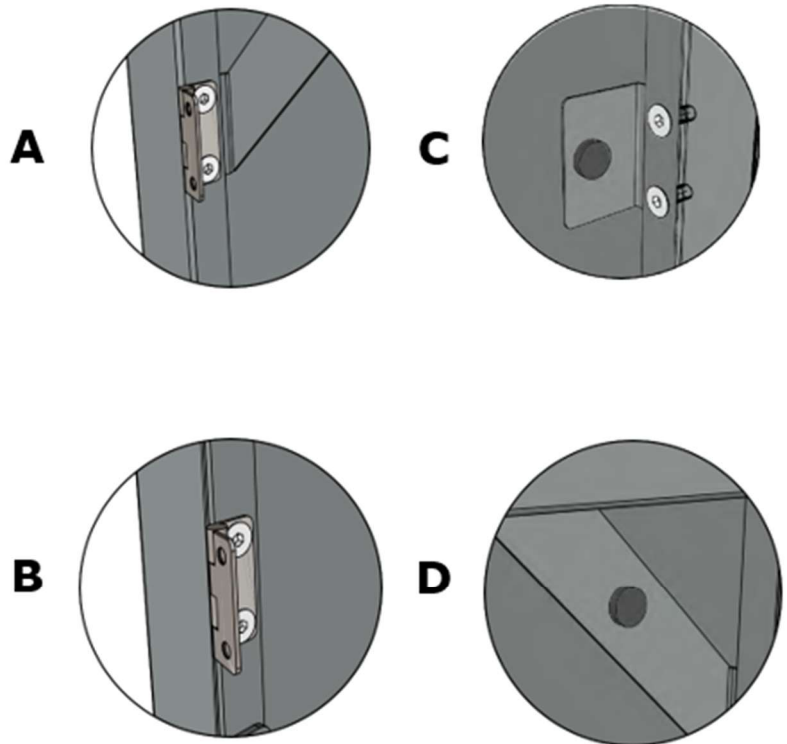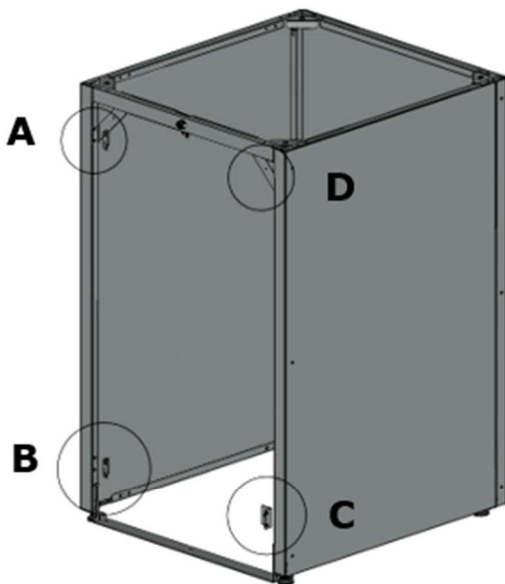


An image that contains draft, design. AI-generated content can be buggy.

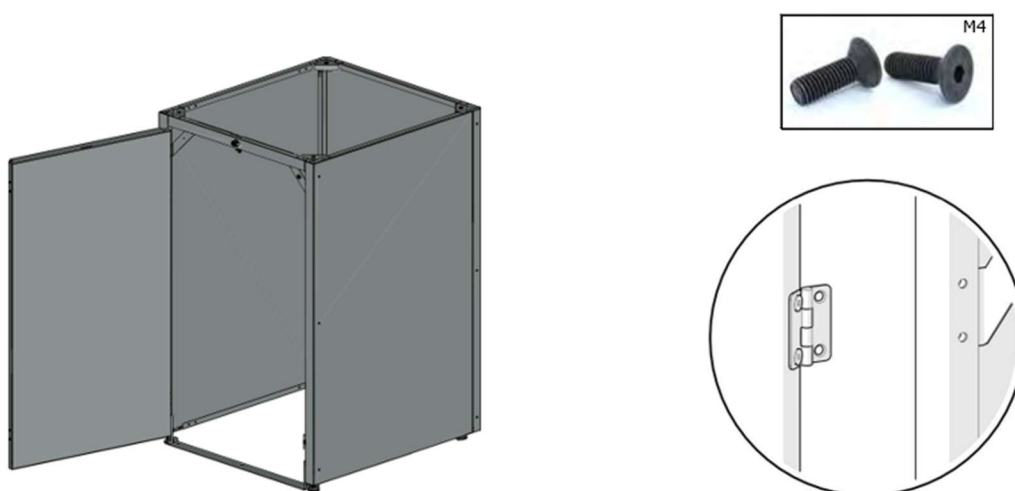

Before installing a wooden door (P05), the wooden boards can first be pulled out, coated and sealed. Then the boards are put back into the frame (P05) and screwed together from the back with 3.5 x 12 screws (P05). Then we put the frame with the boards in the door (P05) and screw them together from behind with M4x10 pan screws (P05).

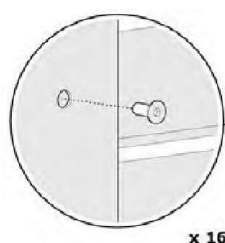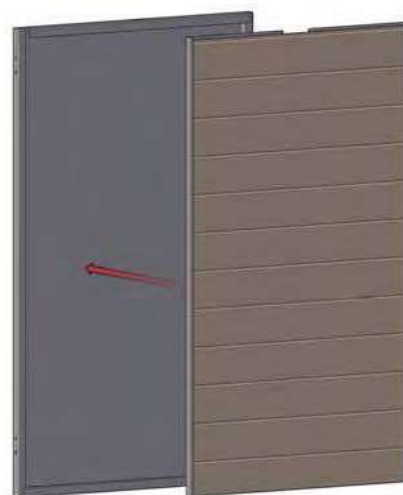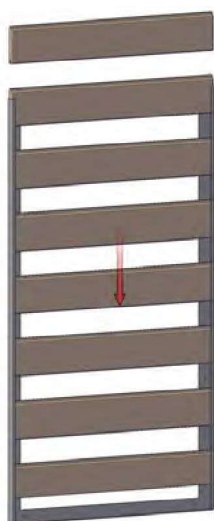


x 16

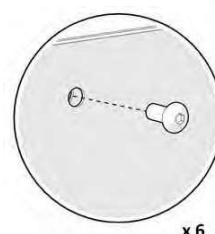

x 6




Before the door with the décor (P06) is installed, the décor itself is inserted into the door frame (P06). Then screw the 2 components together with M4x10 pan screws (P06).

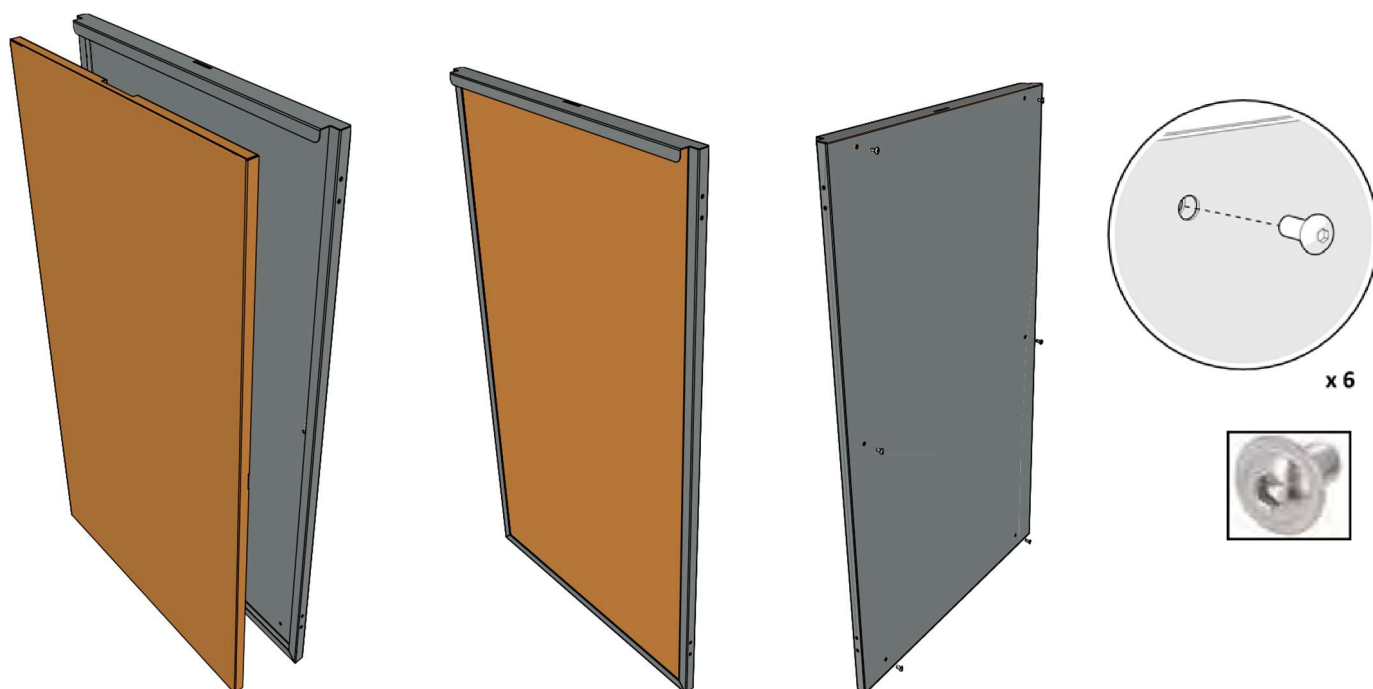

Flora top version

Attach the planting roof (P02) with screws M8/30 (P02).

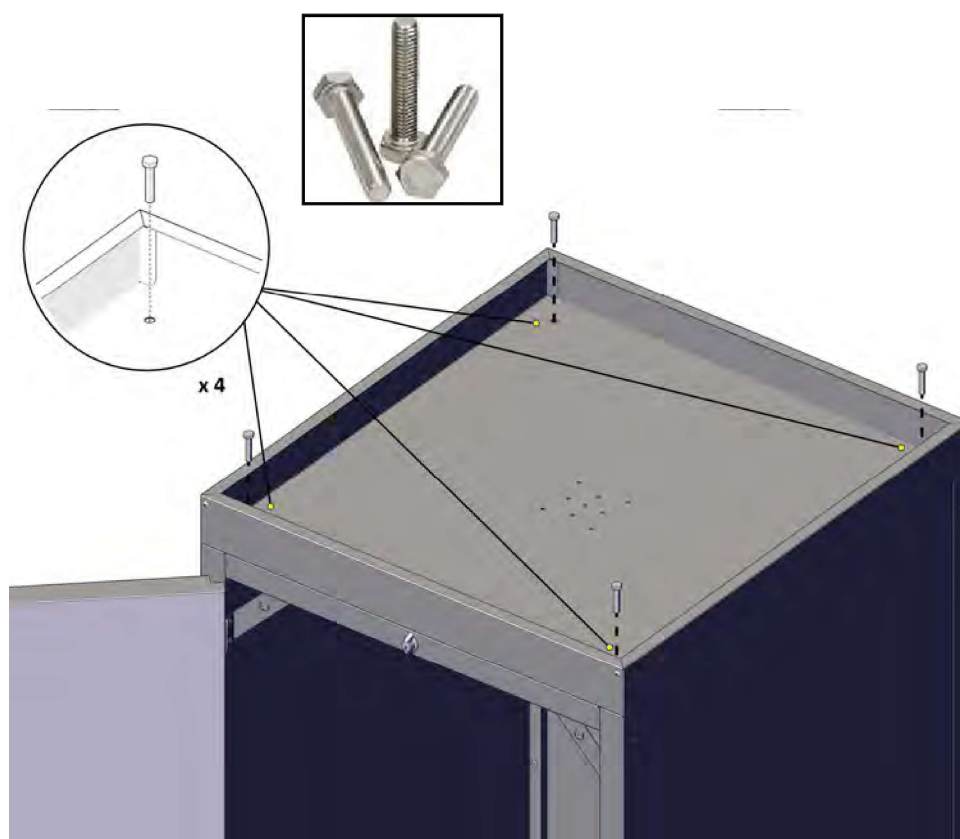


Add the drainage mats (P02).




Attach the brackets (P02) with M4 screws (P02)

Screw the radar locks (P02) to the bracket with M4 screws (P02).

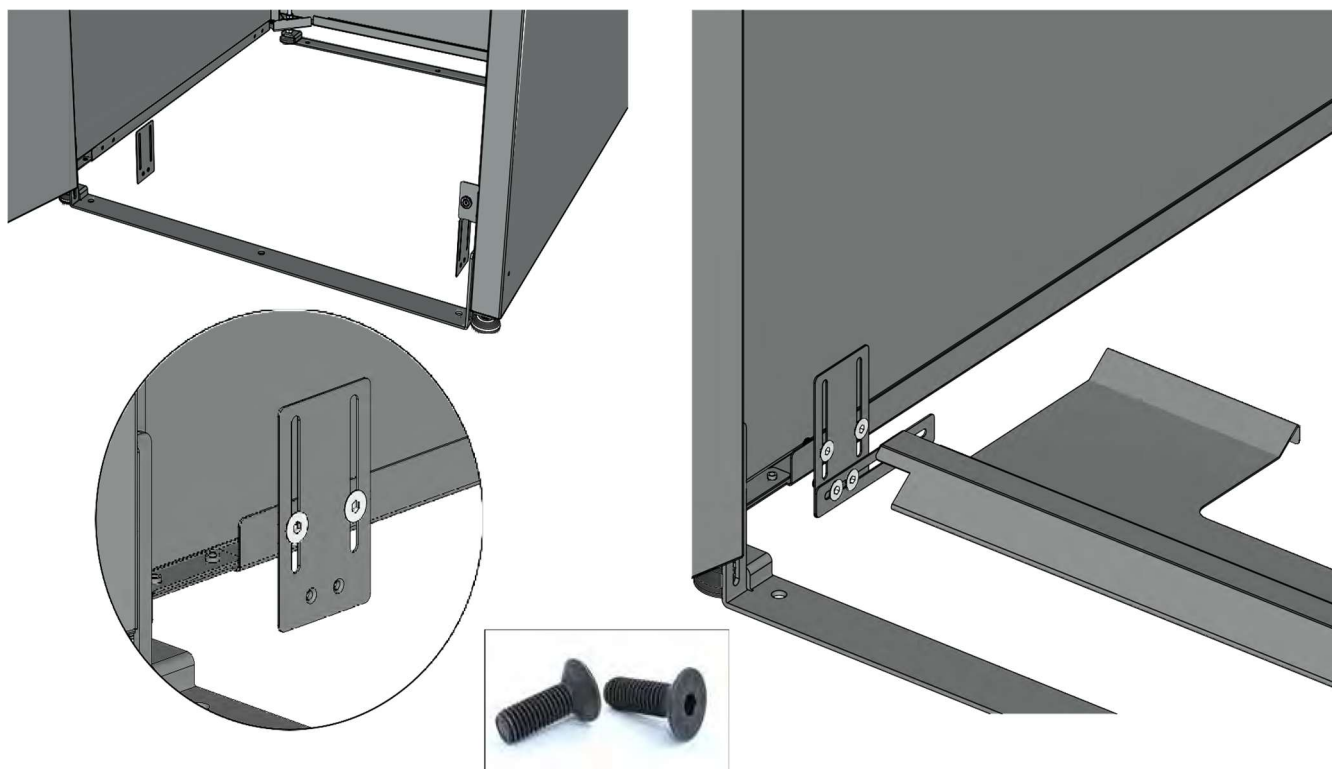


We install the catch chain (PO2)

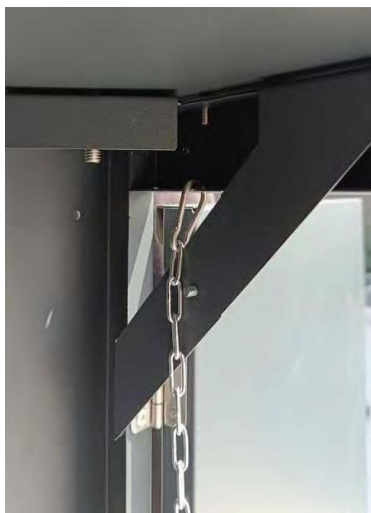


Hatch version


Attach the gas springs (PO1) to the sides of the body with M4 screws (PO1)

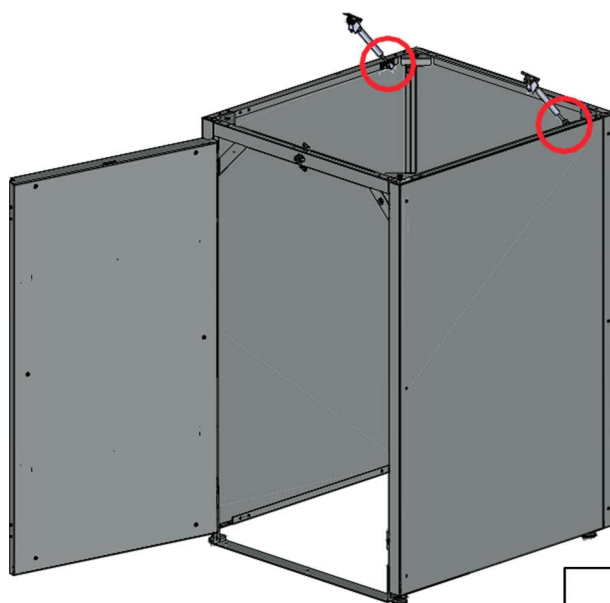



Add rubber dampers (P01) on the front (the screw serves as a spacer).

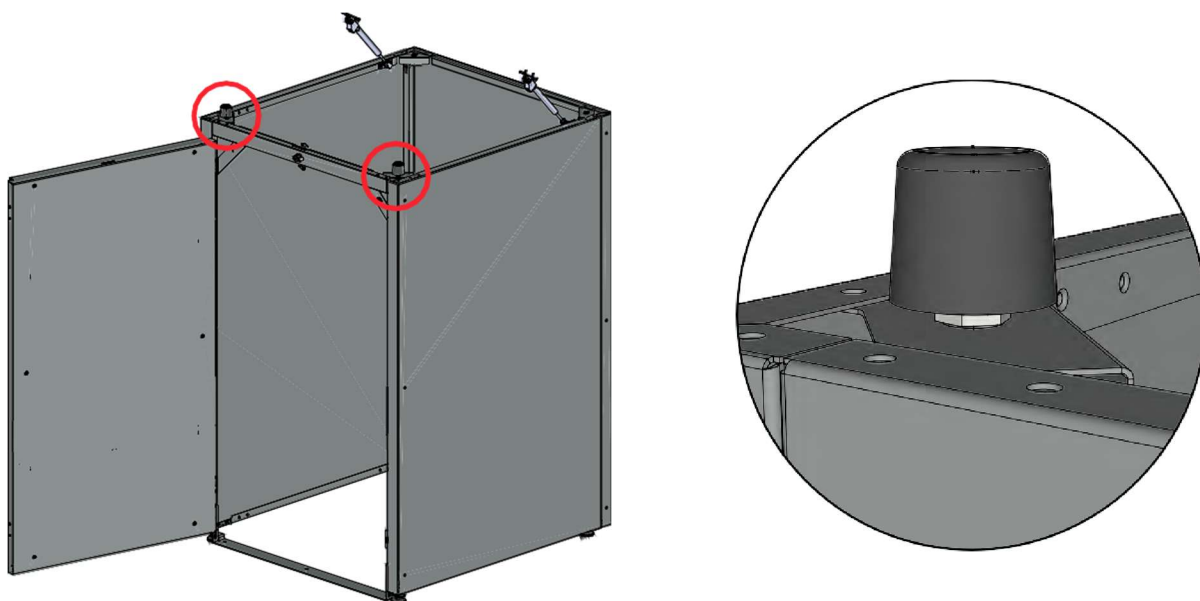


Attach hinges (P01) with M4 screws (P01).

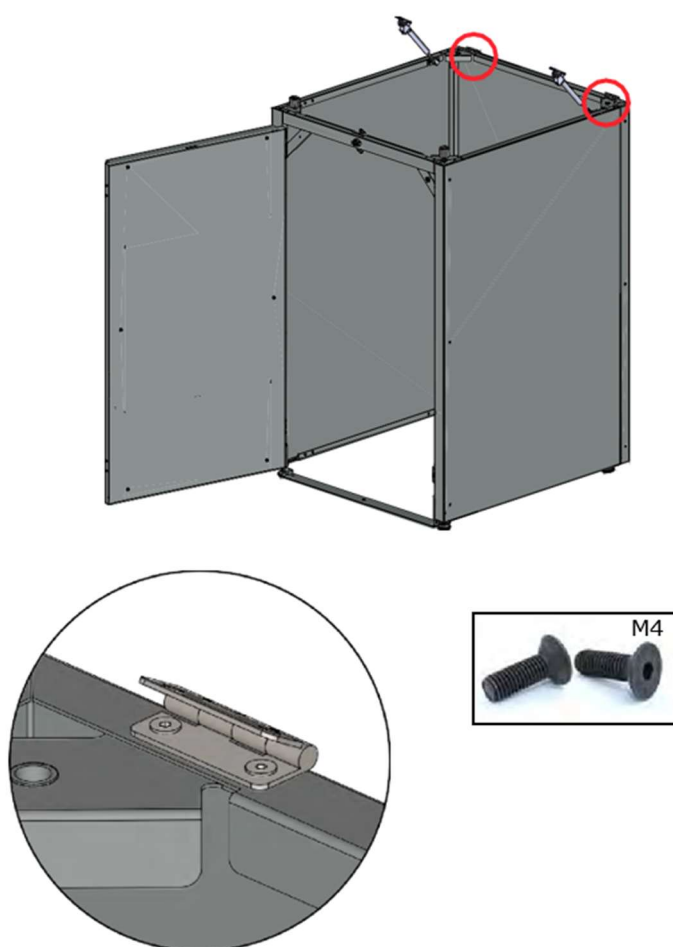

Connect the handle (P01) to the flap (P01) with the M4 (P01) screws.

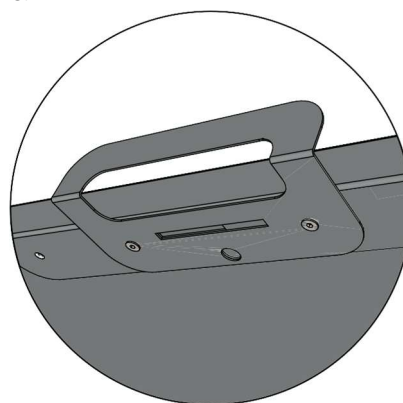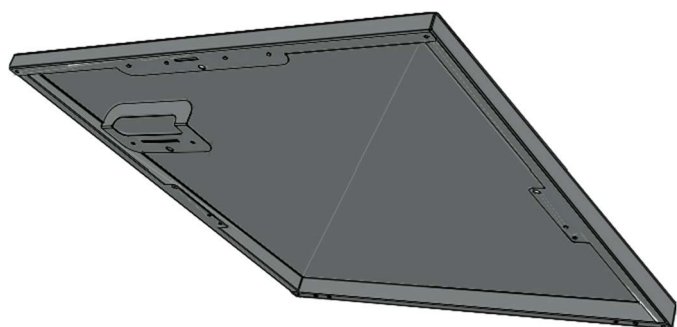

Mount the flap to the hinges with M4 screws (P01) and connect it to the gas struts.



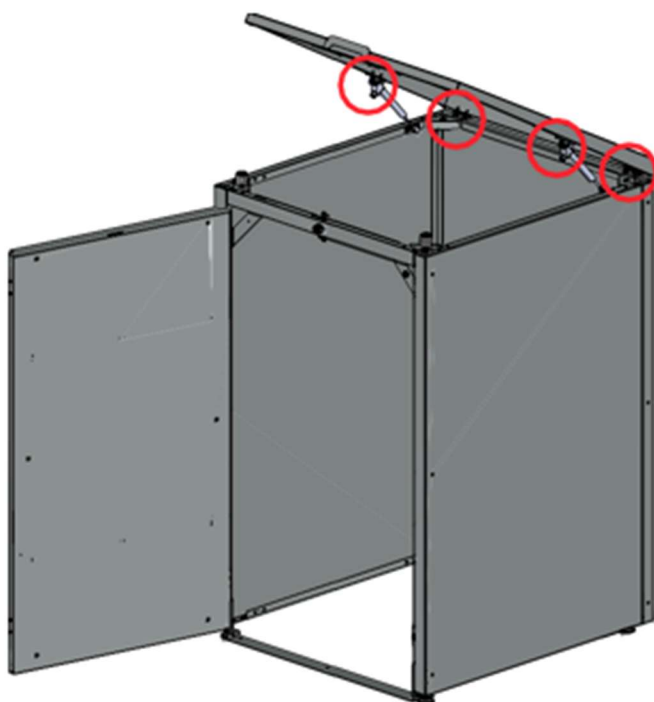


Attach chain (P01) and flap closure (P01).




Multiple version

The modules assembled up to this stage are connected to each other with middle frames by screwing them together with M5 screws + wing nuts (P09). Then add the door and continue the assembly depending on the version chosen: planting roof or hinged lid.

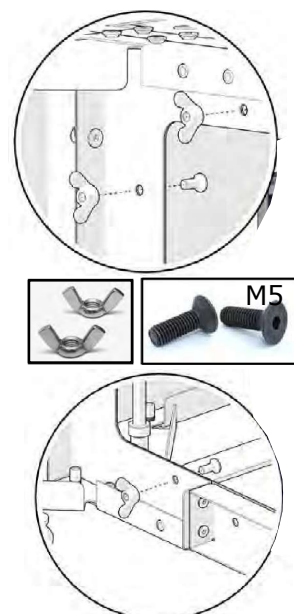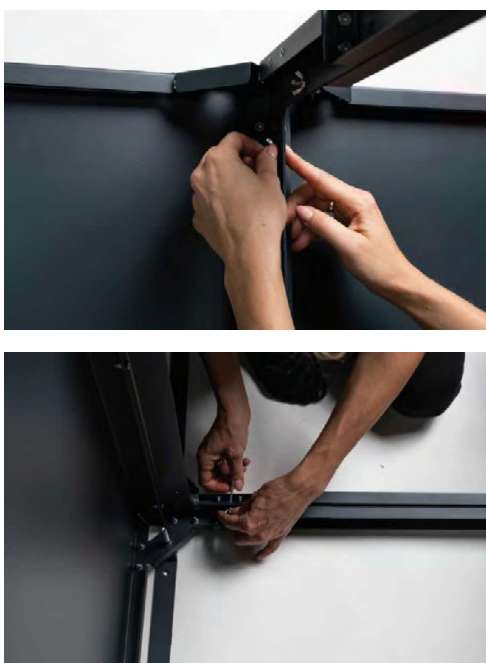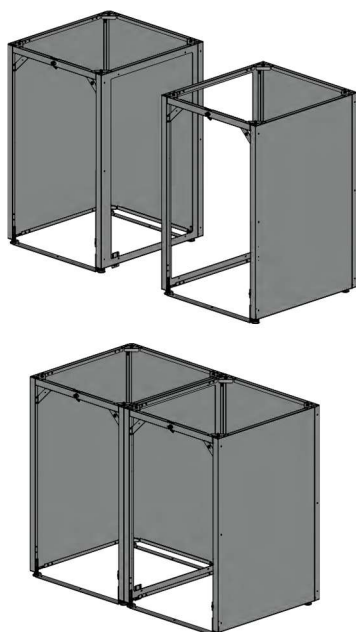


Ground fastening

Attach all modules to the floor with dowels and screws (P08). Make sure you use the right screws and dowels for your substrate!

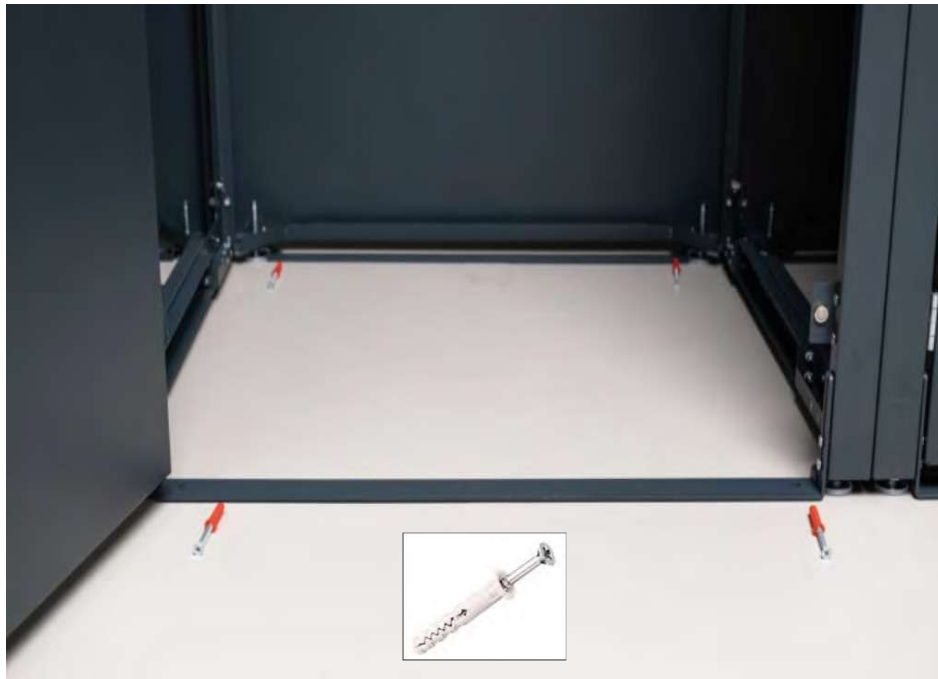

Shelf

Insert the shelf (P10) into the center of the cabinet and attach it to the side walls with M5 taper screws (P10) and M5 wing nuts (P10).

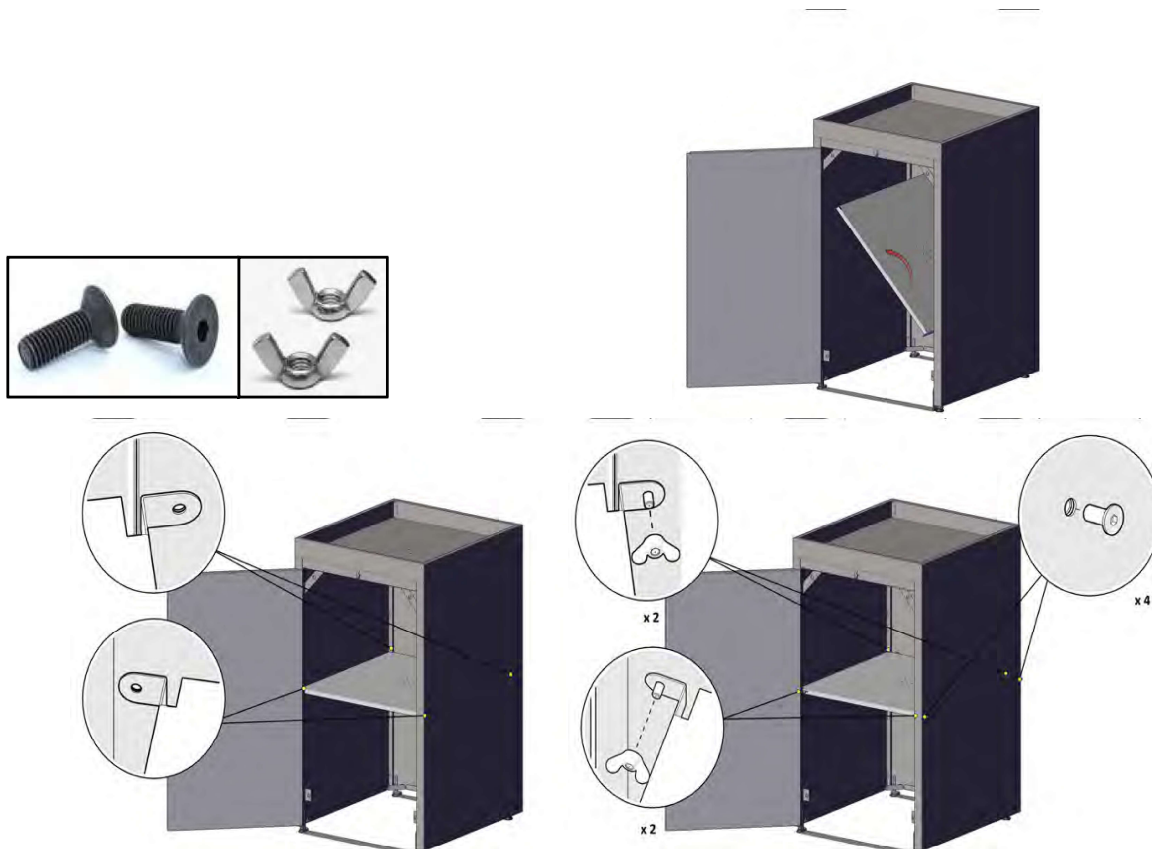



Do you already know our
Outdoor Kitchens?
sgadn.com

